


**NO.1**

Connect the USB cable


Connecter le cable USB sur l'ordinateur et sur l'oscilloscope

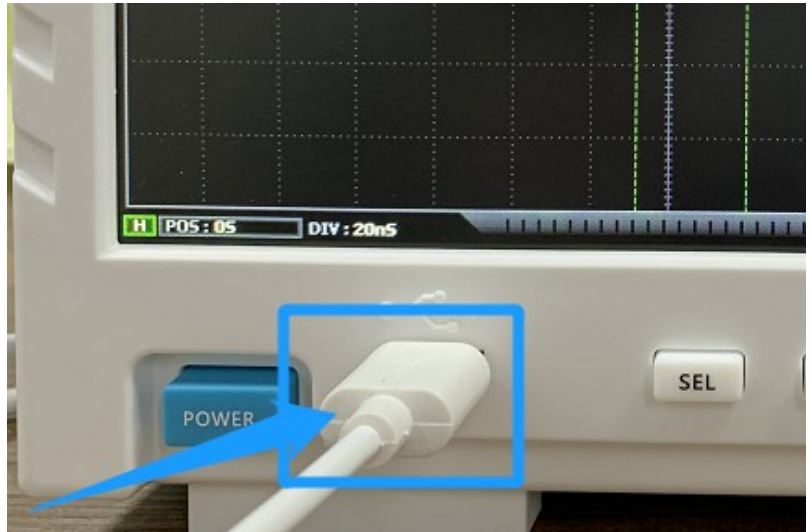

**NO.2**

Enter "MENU" and Click "USB export"

Entrer dans "MENU" et ensuite choisir "USB EXPORT"

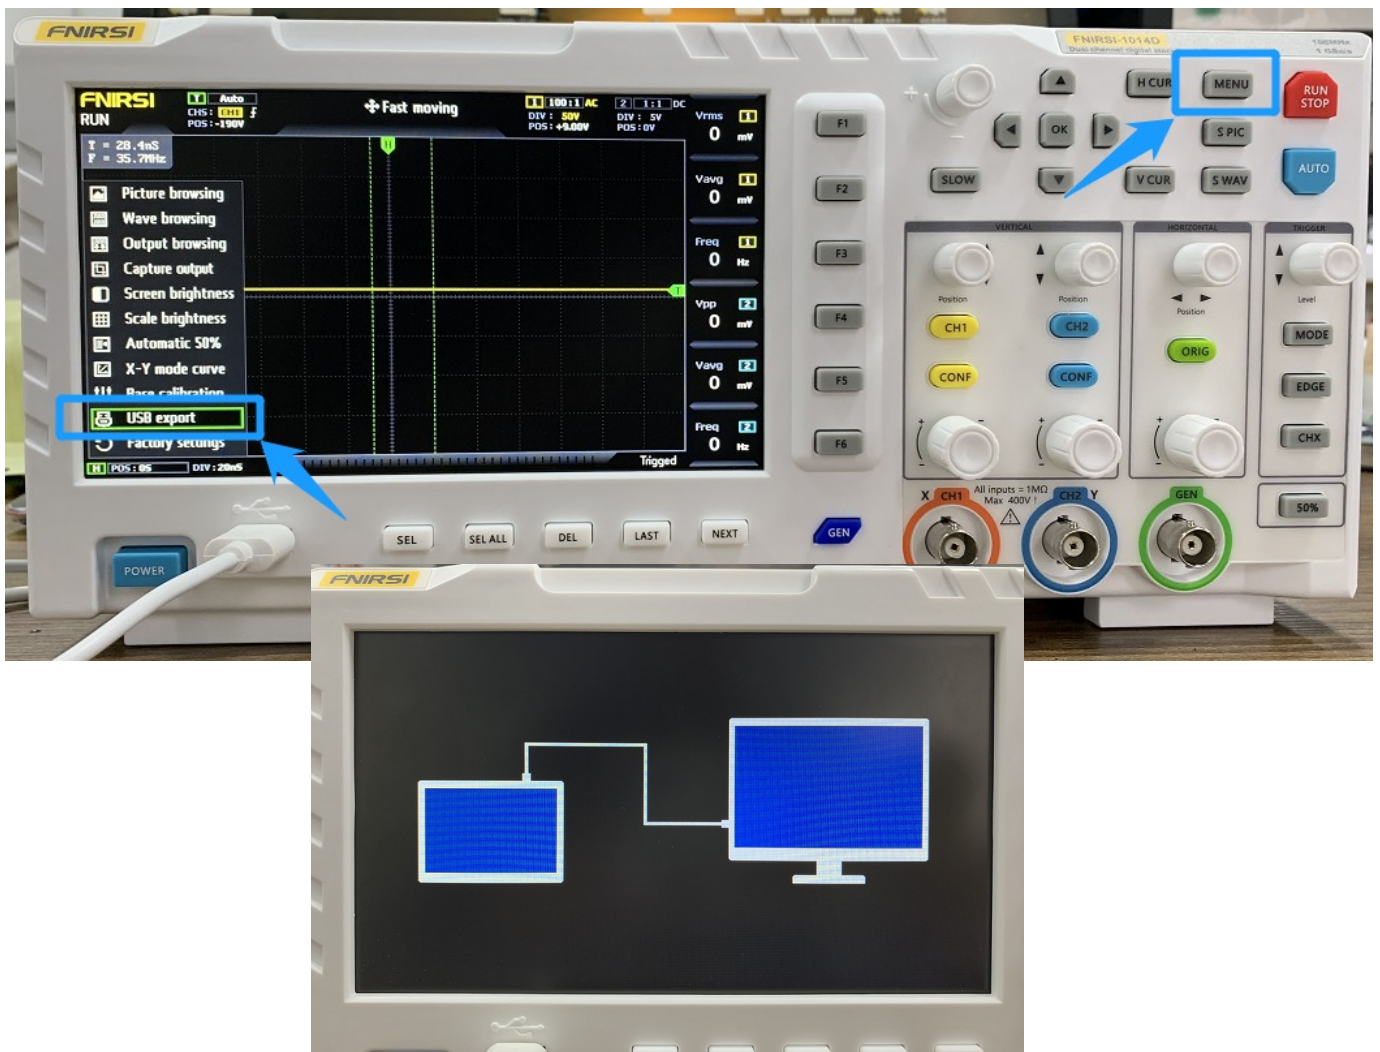

### NO.3

If there are any files in the folder, delete them.  
Then put the new firmware into the file and the U disk (G:),  
Shut down and restart the oscilloscope,  
Then wait for the data reading to complete,  
FNIRSI-1014D is upgraded

S'il y a des fichiers dans le dossier, supprimez-les.

Mettez ensuite le nouveau firmware dans le fichier et le disque U (G:), (attention il est peut être nécessaire de renommer le fichier sous la forme "FSI-1014.BIN")

Arrêter et redémarrer l'oscilloscope,

Attendez ensuite la fin de la lecture des données,

FNIRSI-1014D est mis à niveau

